

## SERVICE BULLETIN

|              |                 |               |                    |
|--------------|-----------------|---------------|--------------------|
| <b>No:</b>   | <b>SB225-24</b> | <b>Issue:</b> | <b>1</b>           |
| <b>Date:</b> | <b>19/02/24</b> | <b>Sheet:</b> | <b>Page 1 of 1</b> |

**SUBJECT:** Update on Using Column Lifts for Dennis Elites

Previously Dennis Eagle stated in manuals that ideally you should have one column lift per wheel, illustrations and descriptions showed/said you could lift 6x2 and 6x4 vehicles with four lifts and 8x4 with six lifts.

Dennis Eagle now recommend using column lifts under all wheels at all times when lifting a Dennis Elite.

IE: Four lifts for 4x2, six lifts for 6x2 – 6x4 and eight lifts for 8x4

Manuals will be updated to reflect this.